


Replacement Blades for Mini Hacksaw (fits Model 37700) – Item 37701


Instructions for Changing Blade:

CAUTION! Saw blade teeth are sharp!

1. Place pointed end of hacksaw down on a firm surface.
2. Hold handle with thumb at base of blade.
3. With downward force, compress handle with thumb until it compresses to a point where blade can be removed.
4. Reverse procedure to insert new blade.

 **WARNING:** This packaging can expose you to chemicals including Vinyl Chloride, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

 **ADVERTENCIA:** Este embalaje puede exponerle a químicos, incluyendo cloruro de vinilo, que es conocido por el Estado de California como causante de cáncer. Para mayor información, visite www.P65Warnings.ca.gov.

 **AVERTISSEMENT:** Ce emballage peut vous exposer à des agents chimiques, y compris chlorure de vinyle, identifiés par l'Etat de California comme pouvant causer le cancer. Pour de plus amples informations, prière de consulter www.P65Warnings.ca.gov.



Superior Tool®

Naperville, IL 60563

superiortool.com

© 2023 Superior Tool Company